


Nach der Montage alle Muttern fest anziehen!

After mounting tighten all nuts firmly!


安装完成后拧紧所有组件!

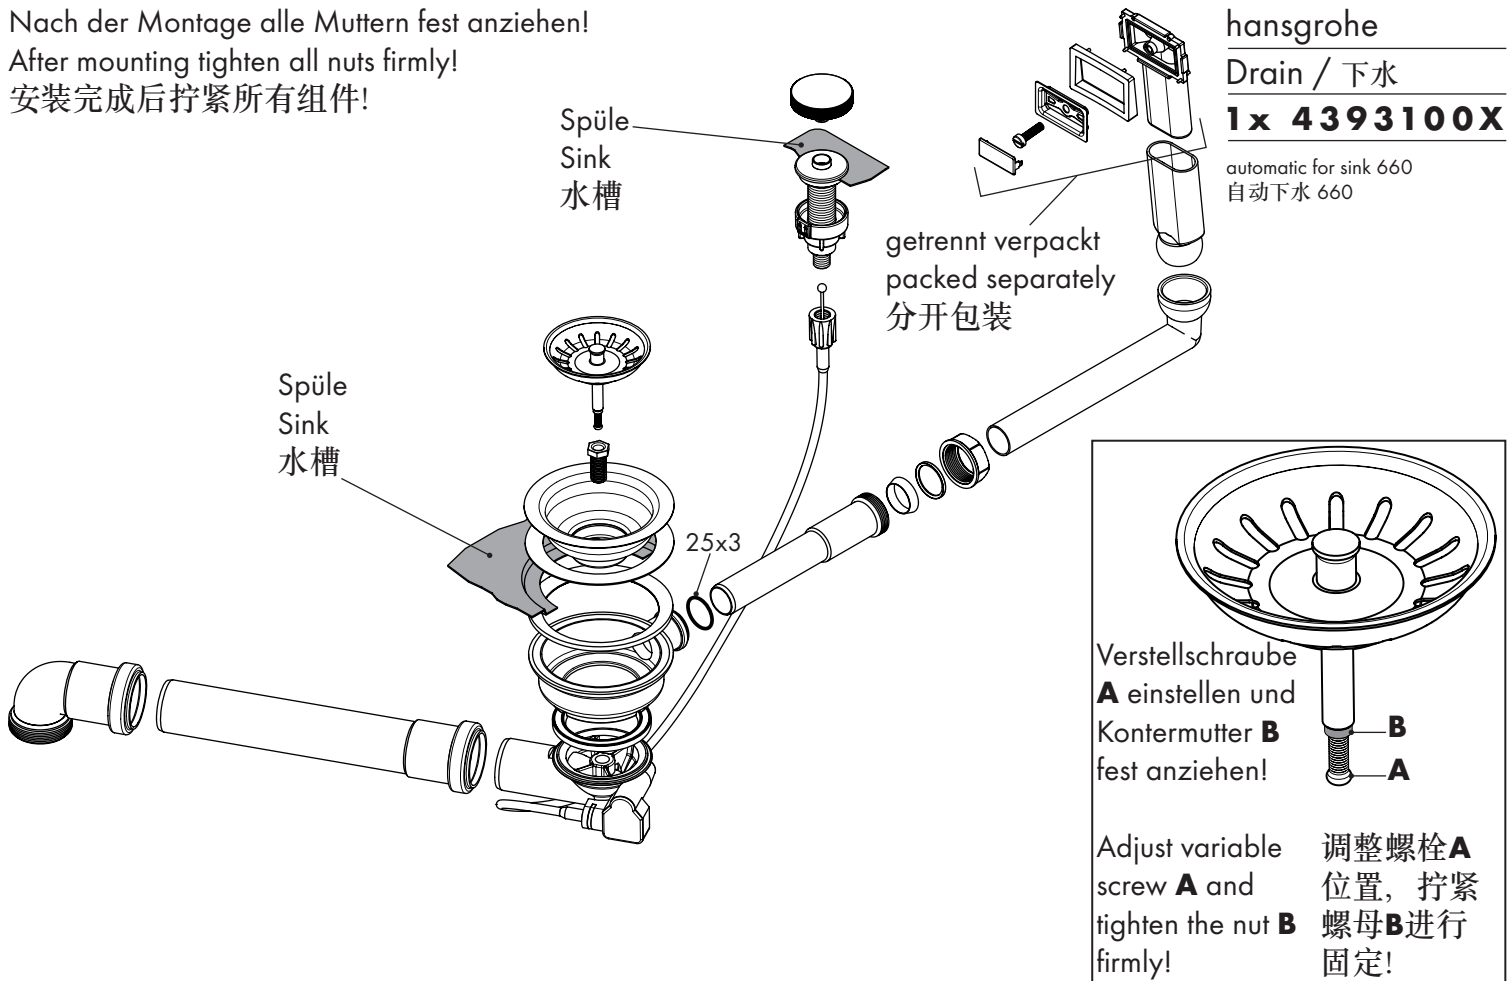

Nach der Montage alle Muttern fest  
anziehen!

After mounting tighten all nuts firmly!

安装完成后拧紧所有组件!

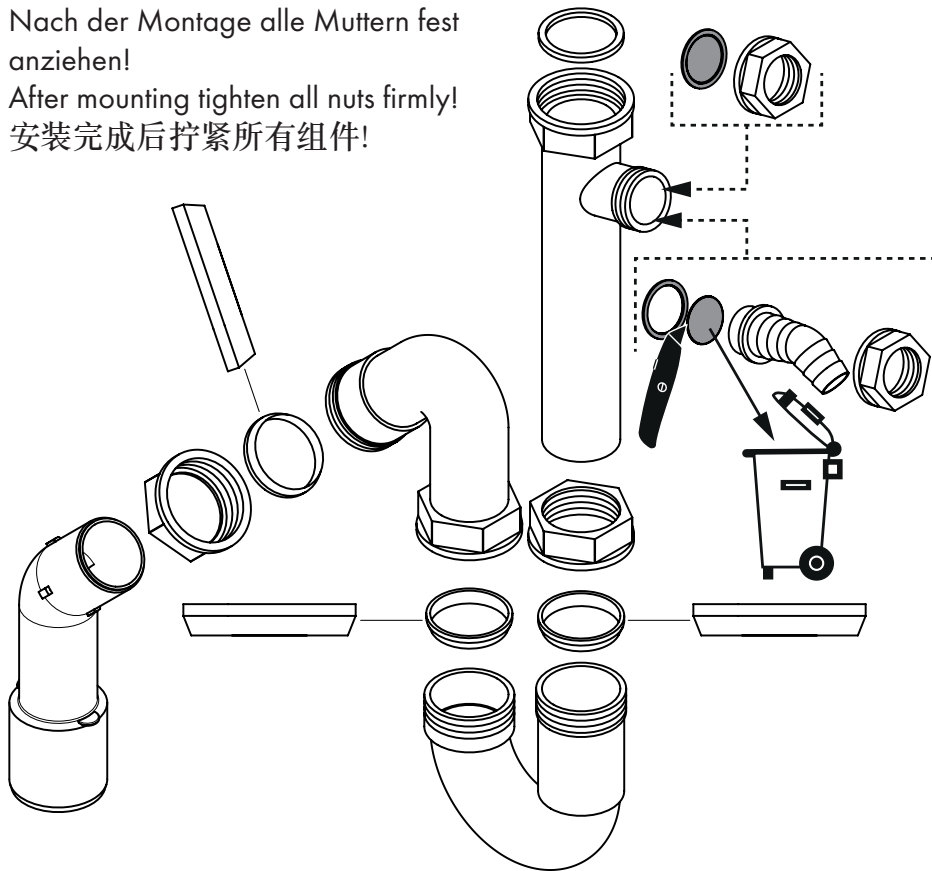

**hansgrohe**

**Quality Certificate**

**质量合格证**

Worker No.

工号

Production date

生产日期

According to QB/T4013-2010

符合标准QB/T4013-2010

**QC  
PASSED**